# INSTALLATION INSTRUCTIONS

## Tree guards (incl. level compensation) - Anchor

**Anchor incl. level compensation installation**

1: Two tree guard parts around the tree must be screwed with the following materials:

- 6 pieces carriage bolts M8
- 6 pieces washers M8
- 6 pieces nut M8

2: The supplied ground anchors must be insert in the provided holes in the tree guard and drive them into the ground until they protrude approx. 10 cm from the ground. Then fine-tune with the following materials:

- 1 piece nut M8
- 1 piece washers M8

3: After final fine adjustment of the height of the tree guard, the ground anchor must be screwed to the following materials:

- 1 piece nut M8
- 1 piece washers M8

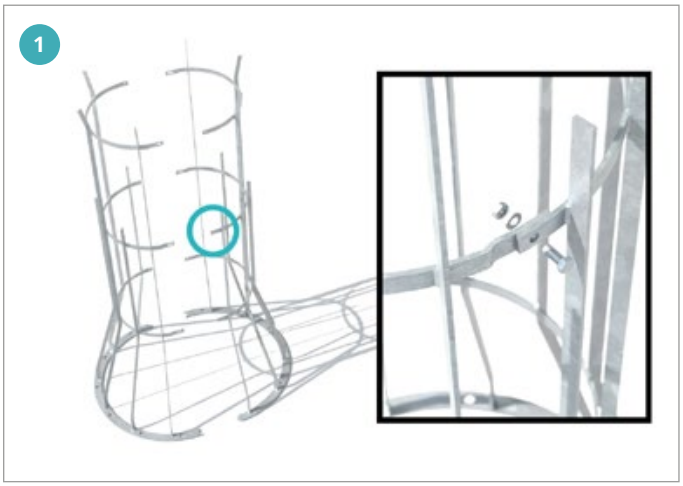


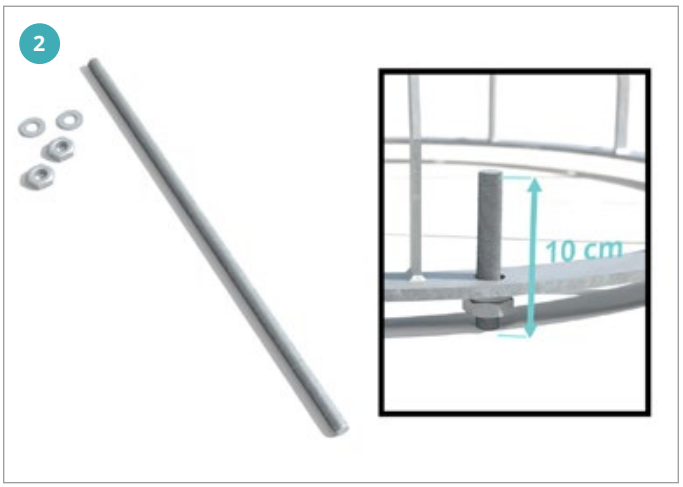


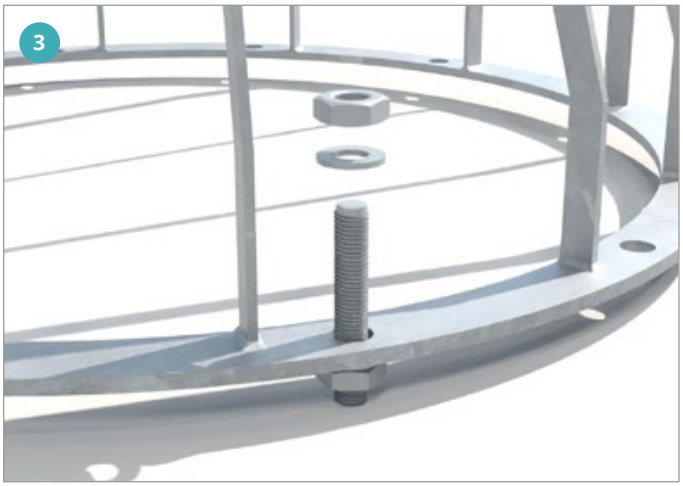


HYDROTEC Technologies AG - Düngstruper Strasse 46 - 27793 Wildeshausen - Germany
E-Mail: office@hydrotec.com Telefon: +49 4431 9355-0